



For all kinds of music

Hello!

H52 SMART WATCH

User Manual

Dear AWEI User,
Thank you for choosing AWEI product. Your choice is crucial for us, which means AWEI has added a new user. Hope that we will bring you a good experience through our products and services. Also hope you will put forward the good advice and suggestions by official customer hotline, Weibo and Wechat in the process of product experience, which can help AWEI to constantly improve product and service.

If you encounter any problems in the using product, please refer to service process. Your support is our strongest power, also your recognition and evaluation are a great encouragement to AWEI. Thank you!

AWEI sales team

Introduction


Thank you for purchasing the model AWEI-H52 Bluetooth calling smart watch. Please read this manual before use.

Warning

Please consult your doctor before starting a new exercise program. Although the watch can monitor your heart rate, it cannot be used for any medical purpose, it is only to help people live a healthier life, remember to consult a doctor before starting any exercise and diet plan.

Accessories List

- 1X Smart Watch
- 1X USB Charging Cable
- 1X User Manual

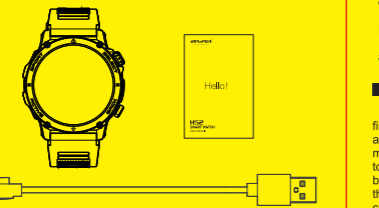

1

How To Use

Applicable Syste Requirement:

- Android 5.0 and above mobile phones
- IOS 9.0 and above mobile phones
- HarmonyOS 3.0 and above mobile phones

(APP Download Method:)



- IOS/Android phone users: Scan the QR code above to download and install
- Android: Search for "AWEI Fit" in the software app store Download and install it.
- Apple: Search for "AWEI Fit" in the App store to download and install

Charging and Activation

Before using the watch for the first time, you need to charge and activate it; use the provided magnetic charging cable to attach it to the metal contacts on the watch back, and connect the other end of the charging cable to a USB charging head or a computer USB port.

3

How To Use

Bind Your Watch

Open the App and register an account

Go to the 'Device', Click [Add a Device]

Choose your device on the scanning list

Finish

In the watch settings menu - about interface, the MAC address will be displayed, and you can identify your device through the MAC address in the device list;
After the watch is successfully bound, each time you open the client in the future, the watch will automatically connect to the phone, and you can synchronize data by pulling down the client data page.

4

How To Use

Operation Guidance



5

How To Use

Introduction to call function

When the watch is connected to the phone, you can use the watch to dial the phone to make calls; you can also answer calls from the phone on the watch. You can also view the call record information on the watch. When using the call function, you need to ensure that the connection between the watch and the phone is stable.








6

How To Use

Blood Pressure

Click on the blood pressure interface to measure the current blood pressure value. More detailed information analysis and data records can be viewed in the client.







7

How To Use

Exercise information

The watch can record and display the number of steps taken, calories consumed, and mileage each day. More detailed information analysis and data records can be viewed in the client.







8

How To Use

Player Shutter

After connecting to a mobile phone, the watch can control the mobile phone music player.








9

How To Use

Remote Shutter

After connecting to a mobile phone, the watch can be used as a mobile phone camera remote control. After opening the camera on the mobile phone, click on the watch camera control page to trigger the mobile phone camera shutter.



10

How To Use

Messages Reminder

The watch can receive and display notification notification on the mobile phone, and the notification switch can be set in the App. The watch message page can store the last 5 message records.






11

How To Use

Drinking water reminder

When the scheduled drinking water time comes, the watch will remind you to drink water. The drinking water reminder function can be set in the APP.



12

Specifications

- Screen size: 1.43-inch AMOLED
- Battery capacity: 280mAh
- Working time :7-9 Days
- Waterproof rating: IP68

System Requirements

- Android : >=5.0 version
- IOS: >9.0 version
- HarmonyOS: >4.0 version

Q&A

Why does the blood pressure data differ from sphygmomanometer?

The deviation of the measured data of the watch and the sphygmomanometer is determined by many factors. The measurement position of the sphygmomanometer is in the brachial artery, and the measurement position of the watch is in the two main branches of the arterioles. Normally, The deviation of the aortic blood pressure and the arteriole blood pressure measured will be three to forty. If you are using the watch and a sphygmomanometer to measure at the same time, because the blood flowing in the artery is in the centrifugal direction. The sphygmomanometer will make the lower part of your elbow under pressure when measuring, and the blood cannot flow smoothly to the lower part. Vascular tension increased, which will cause greater deviation of upper and lower blood pressure measurements.

10

Q&A

Why don't wear the watch during hot bath?

The temperature of the bath water is relatively high, and then it will produce a lot of water vapor. As the water vapor is a gas, its molecular radius is so small, and it is easy to infiltrate from the gap of the watch case. When the temperature drops, it will condense into liquid water droplets again, which is easy to cause short circuit of the internal circuit of the watch and damage the circuit board of the watch.
Note:
Only applicable to non-immersion life waterproof. Swimming, diving, bathing, sauna and other do not enjoy warranty service!

Why the watch can't receive notifications?

Android phone settings:
1. Confirm that the notification reminding switch of the mobile has been turned on;
2. Confirm that the message can be displayed normally in the notification bar of the phone; The watch message push is set by reading the mobile phone notification message; if there is no message in the mobile notification bar, the watch will not be able to receive the notifications.
(Please find the notification settings of the phone, then turn on the notification switch of WeChat, QQ, phone, SMS)

Apple phone settings:
1. Confirm that the notification reminding switch of the mobile has been turned on;
2. Confirm that the message can be displayed normally in the notification bar of the phone;
(Please find the notification settings of the phone, then turn on the notification switch of WeChat, QQ, phone, SMS)

11

Products after-sales service

Please read suggests below in order to helping prolong the product lifespan and clearly understand the warranty clauses.

- ★ Keep the product dry, do not put it in humid circumstance to avoid short circuit.
- ★ Do not expose it to the sun or high heat, High heating will short lifespan of electronic components, damage battery and deform some plastic parts.
- ★ Do not put it in cold circumstance to avoid damage to PCB board.
- ★ Do not attempt to take apart the product, especially non-professionals.
- ★ Do not fall, vibrate strongly, strike with hard objects, to avoid damage to inner electronic circuit.
- ★ Do not use high chemical products, detergent to clean the item.
- ★ Do not scratch the surface with sharp items to avert damaging the case and appearance.
- ★ Do not make it charging 10 hours continuously for the sake of lifespan.

If the product can not work properly, please send it to AWEI authorized maintenance agents. Our staff will help to solve the problems for you.

Statement: In order to improve product performance we will upgrade products, the content may change without notice, please forgive!
Thank you for your purchase.

Supervised by H.K. Yale International Co., Ltd
Produced by Shenzhen Yale Electronics Co., Ltd
Factory Add: 4th Floor, Building 2, Yujing Industrial Park, Huaxiang Road, Longhua District, Shenzhen, China.

Customer service hotline/ Fax:
Hotline: 400-998-3899
Cooperation mailbox: yale@awei.hk
After-sales service: service@awei.hk

For more information please visit:
Website: www.aweistore.com

Contact:
twitter : https://www.twitter.com/aweiwearphone
facebook : https://www.facebook.com/aweiwearproducts
instagram : http://www.instagram.com/aweiwearphone

12

Products after-sales service

1. 7 Days Refund Policy

A. Guarantee of Refund: Within 7 days since the date of purchase, the manufacturer promises to refund if the product bought from AWEI immediate store or authorized distributor shops is in quality problem (artificial and external force damage excluded).

B. Refund Procedure: Please take the product, whole set of package and original invoice to (or please freight pre-paid) to the shop you bought the product for checking. The seller will check by Quality Assurance Identification Rules to clarify the problem. If yes, the seller should refund the money to the user paid for the product.

2. 15 Days Replacement Policy

A. Guarantee of Replacement: Within 15 days since the date of purchase, the manufacturer promises to replace if the product bought from AWEI immediate store or authorized distributor shops is in quality problem (artificial and external force damage excluded).

B. Replacement Procedure: Please take the product, whole set of package and original invoice to (or please freight pre-paid) to the shop you bought the product for checking. The seller will check by Quality Assurance Identification Rules to clarify the problem. If yes, the seller should replace the product and issue a new invoice to the user. Freight arrangements please check with the shop you contact.

3. Twelve-Month Warranty Policy

A. Guarantee of Maintenance: Within twelve months since the date of purchase, the manufacturer promises to offer maintenance service if the product bought from AWEI immediate store or authorized distributor shops is in quality problem (artificial and external force damage excluded).

B. Maintenance Procedure: Please take the product, whole set of package and original invoice to (or please freight pre-paid) to the shop you bought the product for checking. The seller will check by Quality Assurance Identification Rules to clarify the problem. If yes, the seller should fill warranty card with official stamp and send back to manufacturer. After repairing, manufacturer sends the product to the seller and the seller should inform the user to collect it. Freight arrangements please check with the shop you contact.

4. Quality Assurance Identification Rules

A. Quality Assurance is NOT applicable to those items: accessories like packing box, pouch, ear clip and earmuffs, product beyond warranty period, product got from unauthorized agents or informal channels, fake AWEI product, AWEI premium; artificial damaged product; external force damaged product.
B. Quality Assurance Identification Procedure: Check warranty period (by original invoice) — confirm original product (check security code on AWEI official website) — check product damage (clarify artificial damage and external force like water, fire, chemicals or weight crush damages) — check product quality (to confirm if the testing result is conform to description) — check buying channel (subject to manufacturer's verification).

13

Products after-sales service

AWEI Warranty Card (please fill this carefully)

Model No.	Barcode
User Name	TEL
Address	
Seller	Seller Tel
Seller Add	
Date of purchase	Date for Maintenance
Damage situation	Maintenance time
Remark	

14